 
 


Backing Up Files

1 Select video or still image mode.

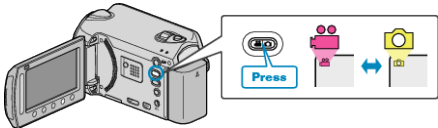

 
2 Select “BACK UP” and touch **OK**.

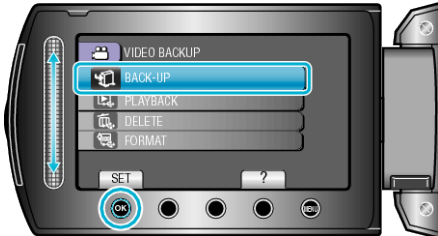

3 Select the media to back up and touch **OK**.



4 Select the desired menu and touch **OK**.

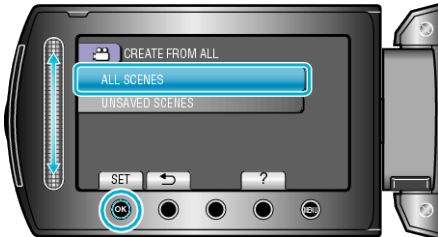

Setting	Details
“ALL SCENES” “ALL IMAGES”	All files in the recording medium are copied.
“UNSAVED SCENES” “UNSAVED IMAGES”	Files that have never been copied are automatically selected and copied.

5 Select “OK” and touch **OK**.



- After copying, touch **OK**.
- To cancel copying, select “STOP”.