

 
Deleting Selected Files

Deletes the selected files.


CAUTION:

- Deleted files cannot be restored.


1 Select the playback mode.

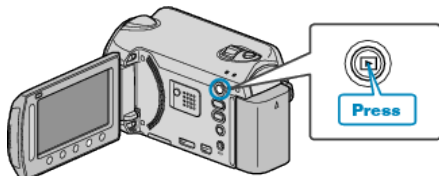

2 Select video or still image mode.

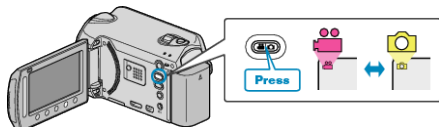 

3 Touch $\odot$ to display the menu.

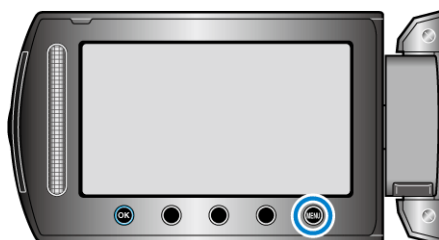 

4 Select "DELETE" and touch $\odot$.



5 Select "FILE SELECT" and touch $\odot$.



6 Select the desired file and touch $\odot$.



7 After selecting all the files to delete, touch "EXEC".



- A delete mark appears on the selected file. To remove the delete mark, touch $\odot$ again.
- Touch "CHECK" to check the selected file.

8 Select "YES" and touch $\odot$.



- After deleting, touch $\odot$.

Memo:

- When files in a playlist are deleted, the playlist changes.
- Files that are protected cannot be deleted. Release protection before deleting the file.