

## RECORDING FAILURE

Remove and re-insert the microSD card.  
 Remove any dirt from the microSD card terminals.  
 Insert the microSD card before turning on the power.  
 Do not subject this unit to strong impact/vibrations.