


## Front

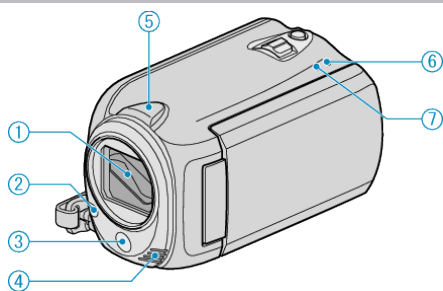

### 1 Lens/Lens Cover (GZ-HD620 only)

- Do not touch the lens and lens cover.
- Do not cover the lens with your fingers during video recording.

### 2 Light (GZ-HD620 only)

- Turn on the light when shooting in dark places.

### 3 Remote Sensor (GZ-HD620 only)

- Do not cover the sensor with your fingers when using the remote control.

### 4 Stereo Microphone

- Do not cover the microphone with your fingers during video recording.

### 5 Camera Sensor

- Do not cover the sensor with your fingers during video recording.

### 6 POWER/CHARGE Lamp

- Lights up: Power "ON"
- Blinks: Charging in progress
- Goes out: Charging finished

### 7 ACCESS Lamp

- Recording or playback is in progress when the lamp lights up or blinks.
- Do not remove the battery pack, AC adapter, or microSD card.