Moving All Files

Moves all videos and still images to another media. Files that are moved will be deleted from the original media. Files with a protect mark will not be deleted from the original media.

1 Select the playback mode.



2 Select video or still image mode.



3 Touch (a) to display the menu.



4 Select "EDIT" and touch .



5 Select "MOVE" and touch ok.



6 Select the direction of moving and touch 68.



- The direction of moving varies with the model.
- 7 Select "MOVE ALL" and touch .



8 Select "YES" and touch @



- Moving of files starts.
- After moving, touch ®.