Verifying the Accessories

If any of the items are missing or defective, consult your JVC dealer or the nearest JVC service center.

If any of the items are missing or a	defective, consult your JVC dealer or the nearest JVC service center. Description
	AC Adapter
	AP-V30M Connects to this unit to charge the battery pack. It can also be used when recording indoors or during playback.
	Power Cord
6	Battery Pack BN-VG114E • Attaches to this unit to supply power.
	AV Cable Connects this unit to a TV to play back recorded images on the TV.
	Component Cable (GZ-HD620 only) Connects this unit to a TV to play back recorded images on the TV in a better quality.
	USB Cable (A Type - Mini B Type) • Connects this unit to a PC.
6	CD-ROM • For installing the provided software "Everio MediaBrowser" on a PC.
	Basic User Guide Read well and keep in a safe place where it can be accessed easily when necessary.
	Remote Control (GZ-HD620 only) RM-V760 • Operates certain functions from a distance.
	Lens Cap (GZ-HD510/GZ-HD500 only) • Protects the lens.

Getting Started

Memo:-

- microSD cards are sold separately.
- When using the AC adapter overseas, please prepare a commercially available converter plug for the country or region of visit.