


## Preparing a DVD Writer (CU-VD3)


1 Connect the USB cable and AC adapter.

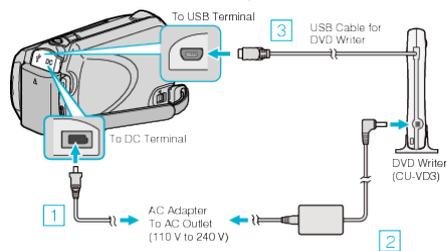

• Refer also to the instruction manual of the DVD writer.


- ① Connect the AC adapter to this unit.
- ② Connect the AC adapter of the DVD writer.
- ③ Connect the USB cable provided with the DVD writer to this unit.

2 Insert a new disc.

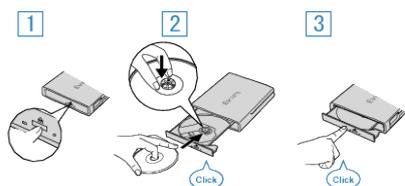

- ① Press the eject button to open the disc tray.
- ② Pull out the tray completely and load a new disc properly.
- ③ Push the disc tray in until it clicks into place.

3 Open the LCD monitor.

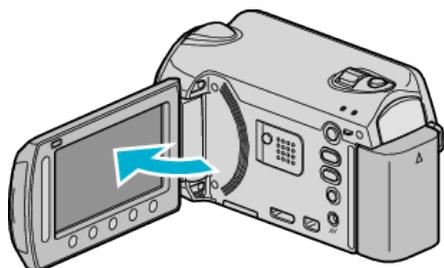

- The CREATE DVD menu appears.
- While the USB cable is connected, the CREATE DVD menu is displayed.

### CAUTION:

- Be sure to turn off the power when connecting the devices.  
Otherwise, electric shocks or malfunctions may occur.