

---

**Unable to turn off the CREATE DVD menu.**

Turn off the power of this unit and the DVD writer, or remove the AC adapter.