


Video Playback

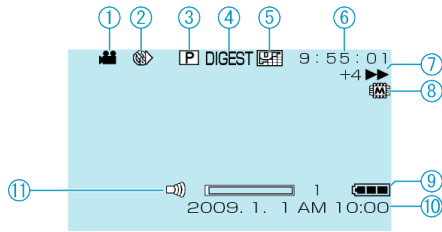

1 Video Mode

"Video/Still Image Button" (P. 0)

2 Time-Lapse Recording

"Recording at Intervals (TIME-LAPSE RECORDING)" (P. 0)

3 Playlist Playback

"Playing Back Playlists" (P. 0)

4 Digest Playback

"Checking the Content of Videos Quickly" (P. 0)

5 Video Quality

"VIDEO QUALITY" (P. 0)

6 Scene Counter

7 Operation Indicator

"Playing Back Videos" (P. 0)

8 Media

"REC MEDIA FOR VIDEO (GZ-MS250/GZ-MS240/GZ-MS230)" (P. 0)

"VIDEO SLOT SELECTION (GZ-MS210)" (P. 0)

9 Battery Indicator

"Remaining Recording Time/Battery Power" (P. 0)

10 Date/Time

"Clock Setting" (P. 0)

11 Speaker Volume Adjustment