

PLAYBACK FAILED

Remove and re-insert the SD card.
 Remove any dirt from the SD card terminals.
 Insert the SD card before turning on the power.
 Do not subject this unit to strong impact/vibrations.