



ERASE ALL DATA (GZ-HM350/GZ-HM330)

Execute this process when disposing of this unit or passing it to another person.


1 Touch **MENU** to display the menu.

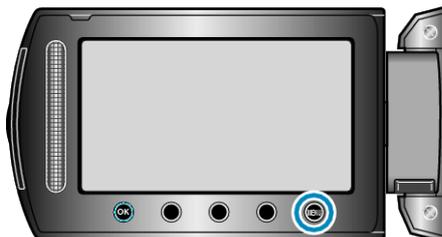

2 Select "MEDIA SETTINGS" and touch **OK**.

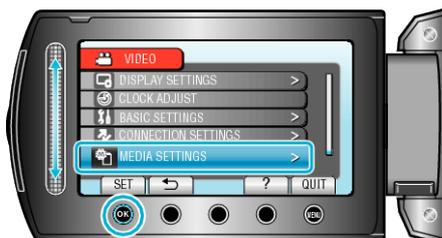

3 Select "ERASE ALL DATA" and touch **OK**.

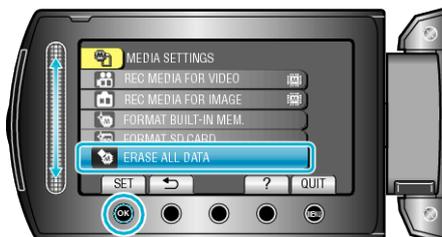

4 Select "YES" and touch **OK**.



- After deleting the data, touch **OK**.

CAUTION:

- Connect the AC adapter as it may take some time to delete data.

Memo:

- Repeat the process to make data restoration even more difficult.