Recording/snapshot cannot be performed.

Check the START/STOP switch.
Set to the recording mode with the ▶ button.
Check the ♣/♠ mode.