 


- To exit the screen, touch .

 
Deleting Playlists


Delete the playlists that you have created.


- 1 Select the playback mode.

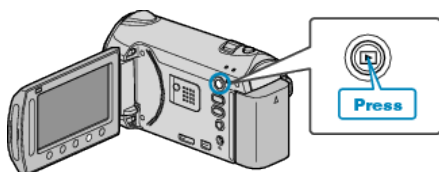


- 2 Select video mode.

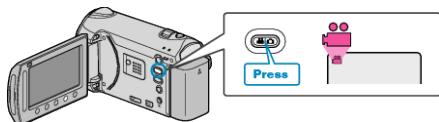

- 3 Touch  to display the menu.

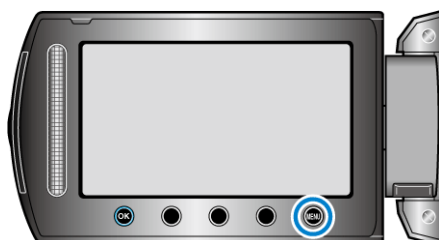 


- 4 Select "EDIT PLAYLIST" and touch .

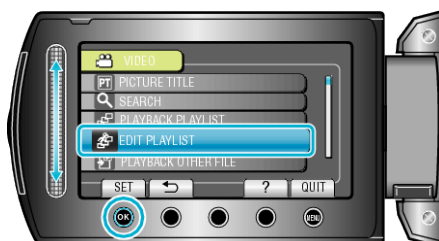 


- 5 Select "DELETE" and touch .

 


- 6 Select the playlist you want to delete and touch .



- All created playlists will be deleted when "DELETE ALL" is selected.

- 7 Select "YES" and touch .

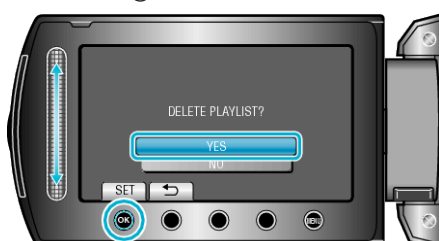

- After deleting, touch .