Releasing Protection of All Files

Releases protection of all files.

1 Select the playback mode.



2 Select video or still image mode.



3 Touch (em) to display the menu.



4 Select "EDIT" and touch .



5 Select "PROTECT/CANCEL" and touch @.



6 Select "CANCEL ALL" and touch ®.



7 Select "YES" and touch ®.



• After setting, touch ®.