SELF-TIMER

Use this when taking a group photo.	
Setting	Details
OFF	Deactivates the self-timer.
2SEC	Starts recording 2 seconds after the SNAPSHOT button is pressed.
10SEC	Starts recording 10 seconds after the SNAPSHOT button is pressed. This setting is suitable for taking group photos.
FACE DE- TEC- TION	Detects faces when the SNAPSHOT button is pressed. Recording starts 3 seconds after the face of the photographer is detected. (1) Faces are detected
	(2) Face of photographer is detected Photographer

Displaying the Item

1 Select still image mode.



2 Touch em to display the menu.



3 Select "SELF-TIMER" and touch .

