


Front

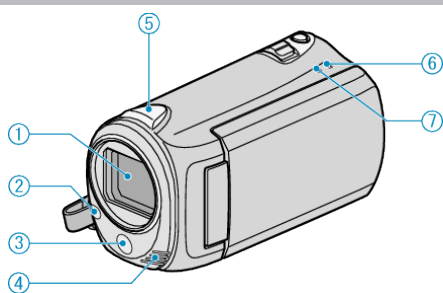

1 Lens

- Do not touch the lens and lens cover.
- Do not cover the lens with your fingers during video recording.

2 Light (GZ-HM350/GZ-HM330)

- Turn on the light when shooting in dark places.

3 Remote Sensor (GZ-HM350/GZ-HM330)

- Do not cover the sensor with your fingers when using the remote control.

4 Stereo Microphone

- Do not cover the microphone with your fingers during video recording.

5 Camera Sensor

- Do not cover the sensor with your fingers during video recording.

6 POWER/CHARGE Lamp

- Lights up: Power "ON"
- Blinks: Charging in progress
- Goes out: Charging finished

7 ACCESS Lamp

- Recording or playback is in progress when the lamp lights up or blinks.
- Do not remove the battery pack, AC adapter, or SD card.