


Adjusting Focus Manually

Set this when the focus is not clear in “AUTO” or when manual focusing is desired.

- 1 Touch  to display the menu.

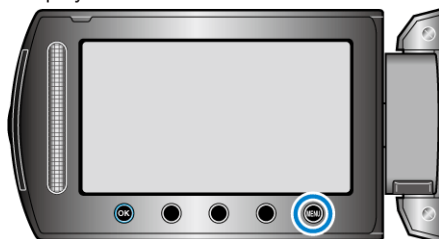

- 2 Select “MANUAL SETTING” and touch .



- 3 Select “FOCUS” and touch .



- 4 Select “MANUAL” and touch .



- 5 Adjust the focus with the slider.



- Slide upward to focus on a distant subject.
- Slide downward to focus on a near subject.

- 6 Touch  to confirm.



Memo:

- A subject that is focused at the telephoto (T) end remains in focus when it is zoomed out to the wide angle (W) end.