


Scene Selection

Common scenes that are often encountered can be recorded with the most suitable settings.

1 Touch  to display the menu.

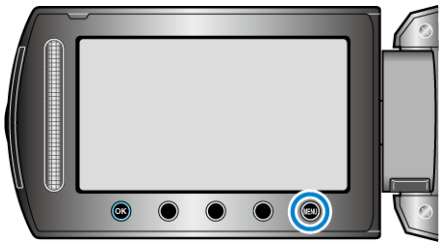


2 Select "MANUAL SETTING" and touch .


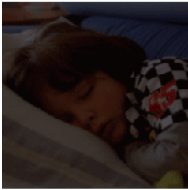



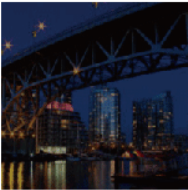














3 Select "SCENE SELECT" and touch .



4 Select the scene and touch .



Setting	Effect
 NIGHT EYE	Increases gain and brightens the scene automatically when the surrounding is dark. To prevent camera shake, use a tripod. <div><b>OFF</b></div> <div><b>ON</b></div>
 NIGHT (GZ-HM350/ GZ-HM330)	Captures night scenes naturally. <div><b>OFF</b></div> <div><b>ON</b></div>
 POR-TRAIT (GZ-HM350/ GZ-HM330)	Blurs the background to bring out the people in the picture. <div><b>OFF</b></div> <div><b>ON</b></div>
 SPORTS (GZ-HM350/ GZ-HM330)	Captures fast-moving subjects clearly in every single frame. <div><b>OFF</b></div> <div><b>ON</b></div>
 SNOW (GZ-HM350/ GZ-HM330)	Prevents the subject from appearing too dark when recording snow scenes on a sunny day. <div><b>OFF</b></div> <div><b>ON</b></div>
 SPOT-LIGHT	Prevents the human subject from appearing too bright under light. <div><b>OFF</b></div> <div><b>ON</b></div>

\*The image is only an impression.