
Common Recording Indications

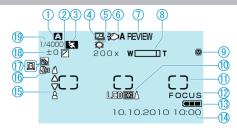

- 1 Recording Mode
- 2 Effect
- 3 Scene Select
- 4 Auto REC
- 5 White Balance
- **6** Light (GZ-HM350/GZ-HM330)
- 7 Quick Review
- 8 Zoom
- 9 Media
- 10 Monitor Backlight
- 11 Metering Area "SPOT" O
- 12 Focus Assist
- 13 Battery Indicator
- 14 Date/Time
- 15 Focus
- 16 Tele Macro
- 17 Backlight Compensation
- D: Face Priority AE/AF
- 18 Brightness
- 19 Shutter Speed