

FORMAT SD CARD


Deletes all files on the SD card.


Setting	Details
FILE	Deletes all files on the SD card.
FILE + MANAGEMENT NO	Deletes all files on the SD card and resets the folder and file numbers to "1".

CAUTION:

- Not available for selection when no SD card is inserted.
- All data on the card will be deleted when it is formatted. Copy all files on the card to a PC before formatting.
- Make sure that the battery pack is fully charged or connect the AC adapter as the formatting process may take some time.
- Format a newly purchased SD card with this unit before use.

Displaying the Item

- 1 Touch  to display the menu.

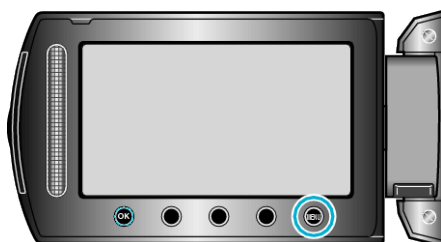


- 2 Select "MEDIA SETTINGS" and touch .



- 3 Select "FORMAT SD CARD" and touch .




- 4 GZ-HM300
Select the card slot.

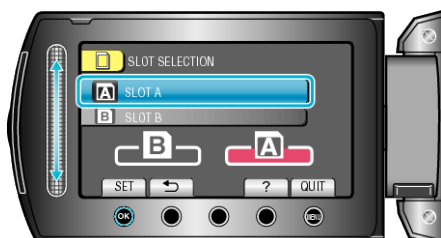

- For GZ-HM350/GZ-HM330, proceed to step 5.

- 5 Select the setting and touch .

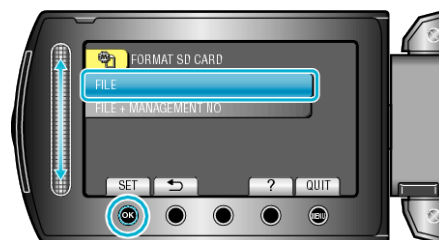

- 6 Select "YES" and touch .



- After formatting, touch .