IMAGE SLOT SELECTION (GZ-HM300)

Sets the recording/playback media of still images.

ı	Setting	Details
	SLOT A	Records still images to the SD card in slot A.
	SLOT B	Records still images to the SD card in slot B.

Displaying the Item

1 Touch (em) to display the menu.



2 Select "MEDIA SETTINGS" and touch ®.



3 Select "IMAGE SLOT SELECTION" and touch @.

