







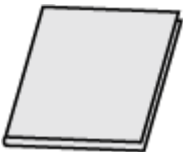


Verifying the Accessories

If any of the items are missing or defective, consult your JVC dealer or the nearest JVC service center.

| Illustration | Description |
|---|--|
|  | AC Adapter AP-V30M <ul style="list-style-type: none"> Connects to this unit to charge the battery pack. It can also be used when recording or playing back videos indoors. |
|  | Power Cord |
|  | Battery Pack BN-VG114E <ul style="list-style-type: none"> Attaches to this unit to supply power. |
|  | Remote Control RM-V760U <ul style="list-style-type: none"> Operates certain functions from a distance. |
|  | AV Cable <ul style="list-style-type: none"> Connects this unit to a TV to play back recorded images on the TV. |
|  | Component Cable <ul style="list-style-type: none"> Connects this unit to a TV to play back recorded images on the TV in a better quality. |
|  | USB Cable (Type A - Mini Type B) <ul style="list-style-type: none"> Connects this unit to a PC. |
|  | CD-ROM <ul style="list-style-type: none"> For installing the provided software "Everio MediaBrowser" on a PC. |
|  | Basic User Guide <ul style="list-style-type: none"> Read well and keep in a safe place where it can be accessed easily when necessary. |

Memo:

SD cards are sold separately.

When using the AC adapter overseas, please prepare a commercially available converter plug for the country or region of visit.