


Operating the Menu

Use the slider and operation buttons to set the menu.

- The menu differs according to the mode in use.

1 Touch  to display the menu.

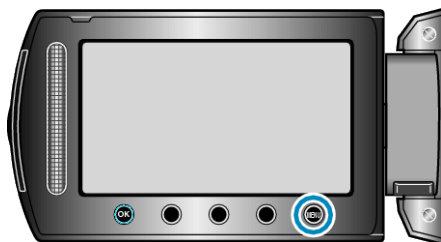

2 Select the desired menu and touch .



3 Select the desired setting and touch .



Memo:

- To close the menu, touch .
- To return to the previous screen, touch .
- To display the help file, touch .

Returning All Settings to Default : _____

- Set using "FACTORY PRESET" in the camera settings menu.