

CONT. SHOOTING SPEED

For setting the shooting interval during continuous shooting.


Setting	Details
HIGH SPEED	<ul style="list-style-type: none"><li>Shoots up to six still images continuously in the still image mode in about 0.4 second.</li><li>Shoots up to 11 still images continuously in the video mode in about 0.4 second.</li></ul>
MEDIUM SPEED	<ul style="list-style-type: none"><li>Shoots up to six still images continuously in the still image mode in about 0.9 second.</li><li>Shoots up to 11 still images continuously in the video mode in about 1.1 seconds.</li></ul>
LOW SPEED	Shoots continuously until the recording media is full.

Memo:

- Shooting speed slows down gradually as continuous shooting goes on in the “LOW SPEED” mode.
- Performing continuous shooting while video recording is in progress switches the mode to “LOW SPEED” temporarily.

Displaying the Item

1 Touch  to display the menu.

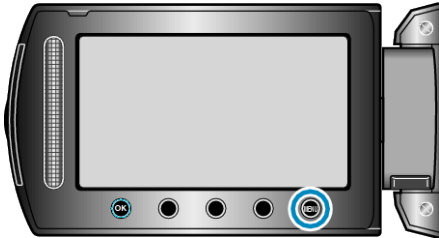

2 Select “BASIC SETTINGS” and touch .



3 Select CONT. SHOOTING SPEED and touch .

