

ERASE ALL DATA

Execute this process when disposing of this unit or passing it to another person.


- 1 Touch  to display the menu.



- 2 Select "MEDIA SETTINGS" and touch .



- 3 Select "ERASE ALL DATA" and touch .

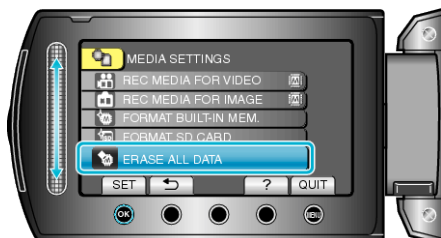

- 4 Select "YES" and touch .



- After deleting the data, touch .

CAUTION:

- Connect the AC adapter as it may take some time to delete data.

Memo:

- Repeat the process to make data restoration even more difficult.