

---

**INSERT DISC/CHANGE DISC**

Open the tray of the DVD writer, check and reset the DVD, then close the tray.

Replace the disc in the DVD writer.