


Deleting Folders in the USB External Hard Disk Drive

Files that are copied to the external hard disk drive can be deleted.

CAUTION:

- Deleted files cannot be restored.
- Be sure to back up important files on a PC.

1 Select video or still image mode.

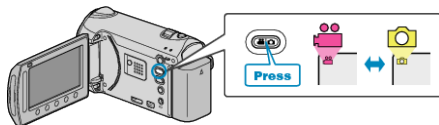

2 Select "DELETE" and touch .



3 Select the desired folder and touch .



4 Select "DELETE" and touch .



- After deleting, touch .