

شحن وحدة البطارية في الخارج

يختلف شكل مخرج الطاقة باختلاف الدول والمناطق.
لشحن وحدة البطارية، أنت بحاجة إلى قابس تحويل يتفق مع شكل المخرج.

A	B	BF	C	O
				

North America	Europe	Oceania	Middle East
United States A	Iceland C	Australia O	Israel C
Canada A	Ireland C	Guam A	Iran C
Mexico A	United Kingdom B.BF	Tahiti C	Kuwait B.C
	Italy C	Tonga O	Jordan B.BF
Asia	Austria C	New Zealand O	
India B.C.BF	Netherlands C	Fiji O	Africa
Indonesia C	Canary Islands C		Algeria A.B.BF.C
Singapore B.BF	Greece C	Latin	Egypt B.BF.C
Sri Lanka B.C.BF	Switzerland C	Argentina O	Guinea C
Thailand A.BF.C	Sweden C	Colombia A	Kenya B.C
South Korea A.C	Spain A.C	Jamaica A	Zambia B.BF
China A.B.BF.C.O	Denmark C	Chile B.C	Tanzania B.BF
Japan A	Germany C	Haiti A	Republic of South Africa
Nepal C	Norway C	Panama A	B.C.BF
Pakistan B.C	Hungary C	Bahamas A	Mozambique C
Bangladesh C	Finland C	Puerto Rico A	Morocco C
Philippines A.BF.O	France C	Brazil A.C	
Vietnam A.C	Belgium C	Venezuela A	
Hong Kong Special	Poland B.C	Peru A.C	
Administrative Region B.BF	Portugal B.C		
Macau Special	Romania C		
Administrative Region B.C			
Malaysia B.BF.C			