 
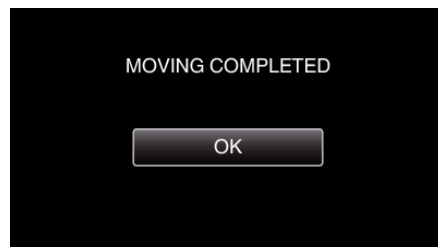 


Moving All Files (GZ-HM50)

 
Moves all videos to an SD card.
Files that are moved will be deleted from the original media.
Files with a protect mark will not be deleted from the original media.

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

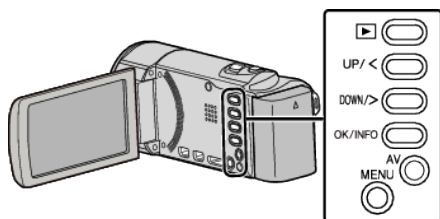


1 Select the playback mode.

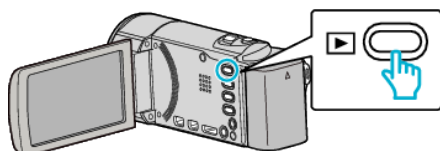

2 Press MENU.

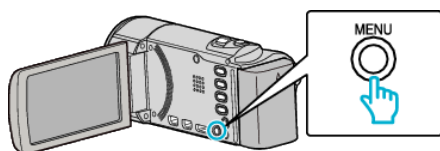 

3 Select "MOVE" and press OK.

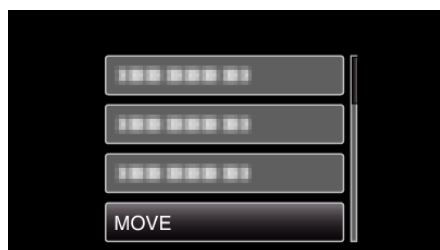 

4 Select "MOVE ALL" and press OK.



5 Select "EXECUTE" and press OK.



- Moving of files starts.

6 Press OK.