 
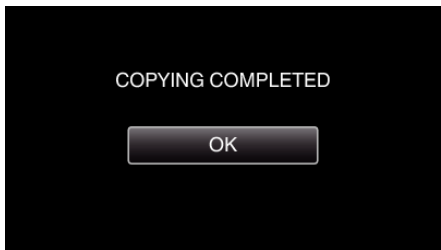 


### Copying All Files (GZ-HM50)

 
Copies all videos to an SD card.

**Memo :**


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

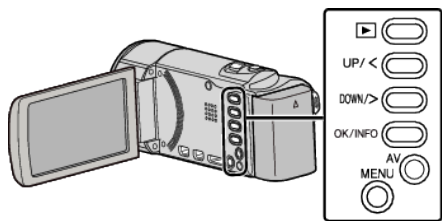


1 Select the playback mode.

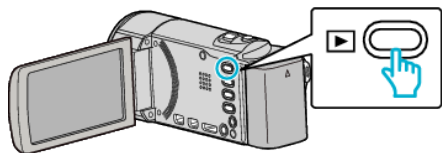

2 Press MENU.

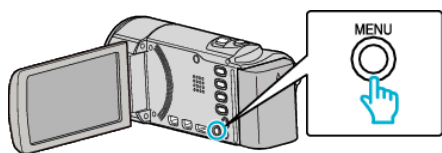 

3 Select "COPY" and press OK.

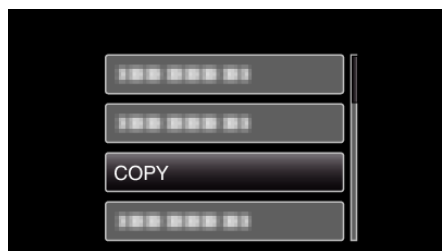 

4 Select "COPY ALL" and press OK.



5 Select "EXECUTE" and press OK.



- Copying starts.

6 Press OK.