 
## **Backing Up All Files**


Before making backup, make sure that enough free space is left in the computer's hard disk (HDD).

#### Memo:

 
To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.



1 Open the LCD monitor.




2 Connect the USB cable and the AC adapter.

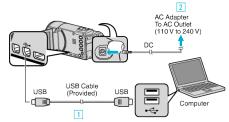

- 1 Connect using the provided USB cable.
- 2 Connect the AC adapter to this unit.
- This unit powers on automatically when the AC adapter is connected.
- Be sure to use the supplied JVC AC adapter.
- 3 The "SELECT DEVICE" menu appears.
- 3 Select "CONNECT TO PC" and press OK.



- Press UP/< or DOWN/> to move the cursor.
- 4 Select "BACK UP" and press OK.

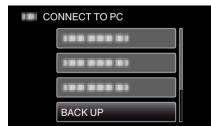

- Press UP/< or DOWN/> to move the cursor.
- To cancel and return to the previous screen, press MENU.
- The provided software Everio MediaBrowser 3 starts up on the computer.

The subsequent operations are to be performed on the computer.

5 Select "Back-up".



Click "All volume in camcorder"

## 6 Start backup.

Saving	Destinatio	on (PC)			
Step 2	Confirm				
Cik Sla . k	≠girEadka.				
Jestnetor fo	save "los:01 Jeerst0000/v	deostaven: Metitatioweer T			
Aux bar at sec	nevil		_		
Void they are	an ya ê li Bh				
Teorpoor I					
HearayssU	41				
		Back	ttat	Canod	1
				k	

- Backup starts.
- 7 After backup is complete, click "OK".

23
ОК Click

### Memo : -

- Before making backup, load the SD card in which the videos are stored on this unit.
- After backing up your files using the provided software, they cannot be restored to this unit.
- If you encounter any problems with the provided software Everio MediaBrowser 3, please consult the "Pixela User Support Center".

Telephone	USA and Canada (English): +1-800-458-4029 (toll-free) Europe (UK, Germany, France, and Spain) (English/German/French/Spanish): +800-1532-4865 (toll- free) Other Countries in Europe (English/German/French/Spanish): +44-1489-564-764 Asia (Philippines) (English): +63-2-438-0090 China (Chinese): 10800-163-0014 (toll-free)	
Homepage	http://www.pixela.co.jp/oem/jvc/mediabrowser/e/	
a Dalata unuanta du ida an hafara malina ha duun		

• Delete unwanted videos before making backup. It takes time to back up many videos.

## **Disconnecting this Unit from Computer**

1 Click "Safely Remove Hardware and Eject Media".



2 Click "Safely Remove USB Mass Storage Device".

# Copying

- 3 (For Windows Vista) Click "OK".
- **4** Disconnect the USB cable and close the LCD monitor.