

**Mosaic-type noise occurs when recording scenes with fast movements or extreme changes in brightness.**

Set the "VIDEO QUALITY" to "LS" or "LE" for recording. (GZ-HM30/GZ-HM301)

Set the "VIDEO QUALITY" to "UXP" or "XP" for recording. (GZ-HM430/GZ-HM435)