


## Rear

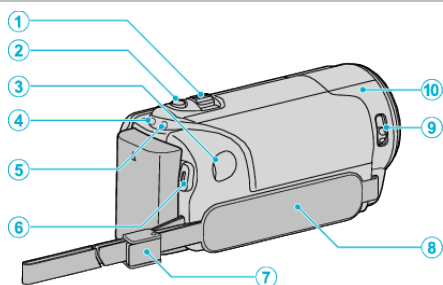

- 1** Zoom/Volume Lever
  - During shooting: Adjusts the shooting range.
  - During video playback: Adjusts the volume.
  - During index screen display: Moves to the next or previous page.
- 2** i.AUTO Button
  - Switches between Intelligent Auto and Manual modes.
- 3** DC Connector
  - Connects to an AC adapter to charge the battery.
- 4** ACCESS (Access) Lamp
  - Lights up/blinks during recording or playback.
  - Do not remove the battery pack, AC adapter, or SD card.
- 5** POWER/CHARGE (Power/Charge) Lamp
  - Lights up: Power "ON"
  - Blinks: Charging in progress
  - Goes out: Charging finished
- 6** START/STOP Button (Video Recording) /  
▶/|| (Play/Pause) Button (Video Playback)
  - Starts/stops video recording.
  - Starts/pauses video playback.
- 7** Strap Lock
  - Allows the grip belt to be removed and used as a hand strap.
- 8** Grip Belt
  - Pass your hand through the grip belt to hold this unit firmly.
- 9** Lens Cover Switch
  - Opens and closes the lens cover.
- 10** Camera Sensor
  - Do not cover the internal sensor with your fingers during video recording.