

FORMAT SD CARD

 
Deletes all files on the SD card.

Setting	Details
FILE	Deletes all files on the SD card.
FILE + MANAGEMENT NO	Deletes all files on the SD card and resets the folder and file numbers to "1".


Caution :

- Not available for selection when no SD card is inserted.
- All data on the card will be deleted when it is formatted.
Copy all files on the card to a computer before formatting.
- Make sure that the battery pack is fully charged or connect the AC adapter as the formatting process may take some time.


- 5 Select "YES" and press OK.

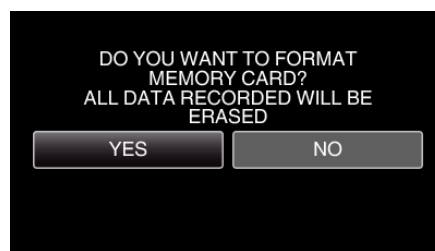**Displaying the Item****Memo :**

 
To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

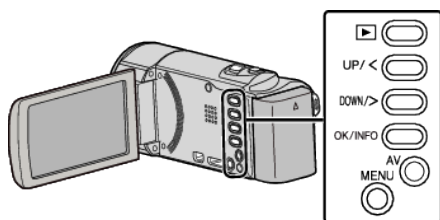


- 1 Press MENU.

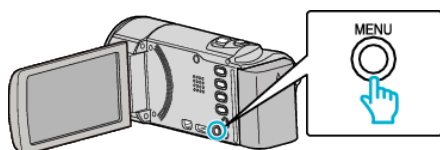 

 - 2 Select "MEDIA SETTINGS" and press OK.

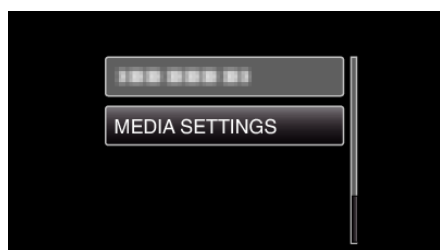

 - 3 Select "FORMAT SD CARD" and press OK.

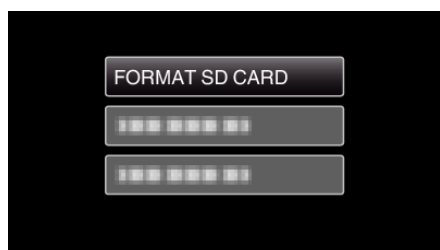

- 4 Select the desired setting and press OK.

