 



Scene Selection

Common scenes that are often encountered can be recorded with the most suitable settings.


Memo : To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

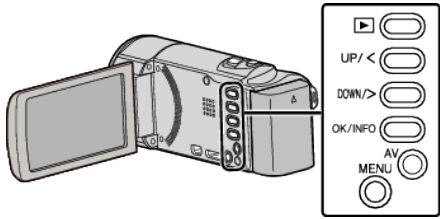

 
1 Press MENU.

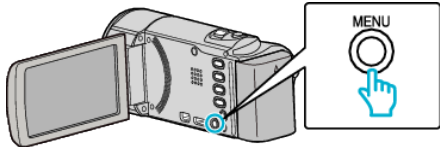


2 Select "MANUAL SETTING" and press OK.

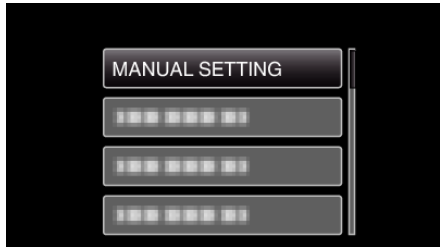 

3 Select "SCENE SELECT" and press OK.

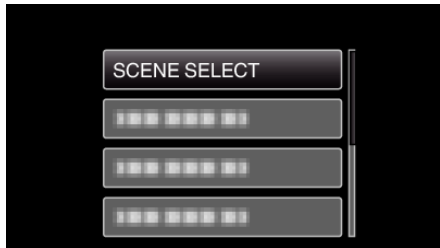 

4 Select the scene and press OK.

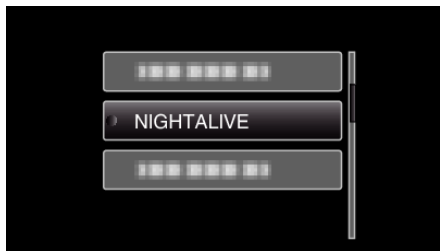 

*The image is only an impression.

Setting	Effect
NIGHTLIVE	Increases gain and brightens the scene automatically using a slow shutter when the surrounding is dark. To prevent camera shake, use a tripod. OFF ON