 


## Deleting All Files

Deletes all files.

### Memo :

 
To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

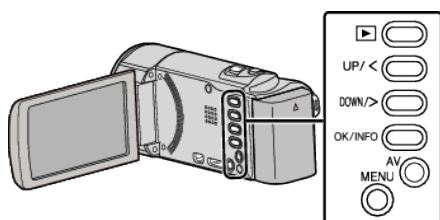


### Caution :

- Deleted files cannot be restored.


- 1 Select the playback mode.

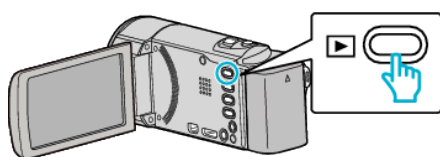


- 2 Press MENU.

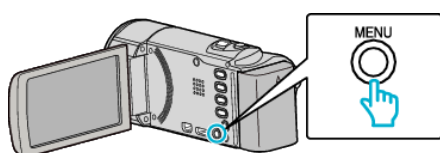 


- 3 Select "DELETE" and press OK.

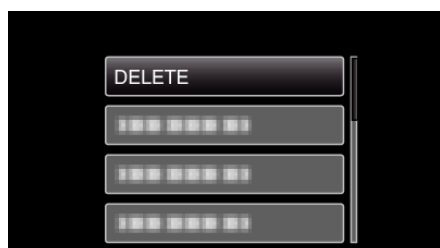 

- 4 Select "DELETE ALL" and press OK.

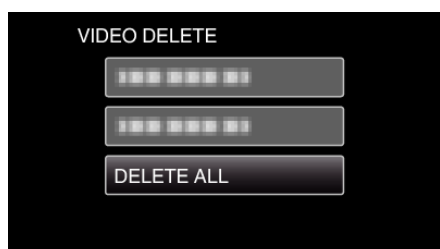 

- 5 Select "YES" and press OK.

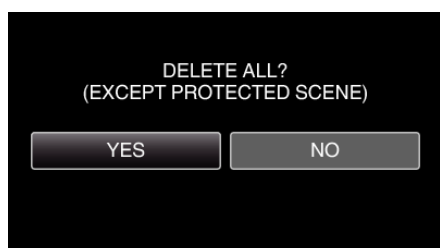 

- After deleting, press OK.
- To cancel the deletion, select "NO" and press OK.

### Memo :

- Files that are protected cannot be deleted.  
Release protection before deleting the file.