

Optional Accessories

You can record for a longer time by using the optional battery pack.

Product Name	Description
Battery Pack <ul style="list-style-type: none"> • BN-VG114E • BN-VG121E • BN-VG138E 	<ul style="list-style-type: none"> • Provides a longer recording time than the battery pack that comes with this unit. It can also be used as a spare battery pack.
Battery Charger <ul style="list-style-type: none"> • AA-VG1E 	<ul style="list-style-type: none"> • Enables the battery pack to be charged without using this unit.
HDMI Cable <ul style="list-style-type: none"> • VX-HD310ES • VX-HD315ES • VX-HD320 • VX-HD330 	<ul style="list-style-type: none"> • For viewing in high picture quality. • Transmits video, audio, and control signals between devices.

Memo : _____

- For more information, refer to the catalog.
- BN-VG107E (GZ-HM30/GZ-HM430/GZ-HM435) or BN-VG114E (GZ-HM301) is the same battery pack that comes with this unit.
- File copying by connecting this unit to a DVD writer is not supported.

Approximate Recording Time (Using Battery)

Battery Pack	Actual Recording Time	Continuous Recording Time
BN-VG107E (Supplied) (GZ-HM30/GZ-HM430/GZ-HM435)	40 m	1 h 5 m
BN-VG114E (Supplied) (GZ-HM301)	1 h 15 m	2 h 10 m
BN-VG121E	1 h 55 m	3 h 15 m
BN-VG138E	3 h 20 m	5 h 45 m

- The above are values when "MONITOR BRIGHTNESS" is set to "3" (standard).
- The actual recording time may be shorter if zooming is used or if recording is stopped repeatedly.
(It is recommended to prepare battery packs ready for three times the expected recording time.)
- When the battery life is reached, the recording time becomes shorter even if the battery pack is fully charged.
(Replace the battery pack with a new one.)