



## Interior

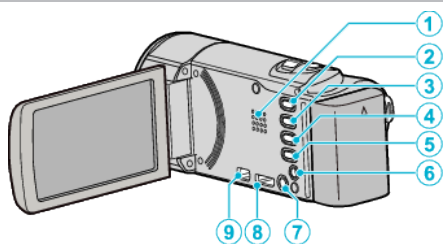

- 1** Speaker
  - Outputs audio sound during video playback.
- 2**  (Play/Record) Button
  - Switches between recording and playback modes.
- 3** UP/< Button
  - UP: Scrolls/moves cursor on the icons upward
  - <: Reverse search
- 4** DOWN/> Button
  - DOWN: Scrolls/moves cursor on the icons downward
  - >: Forward search
- 5** OK/INFO Button
  - Confirms the selection. / Displays information as follows.
  - Recording: Displays the remaining time and battery power.
  - Playback: Displays file information such as recording date.
- 6** AV Connector
  - Connects to a TV, etc.
- 7** MENU (Menu) Button
- 8** HDMI Mini Connector
  - Connects to an HDMI TV.
- 9** USB Connector
  - Connects to computer using a USB cable.