

 
Operating the Menu

Use the operation buttons to set the menu.


- The menu differs according to the mode in use.

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

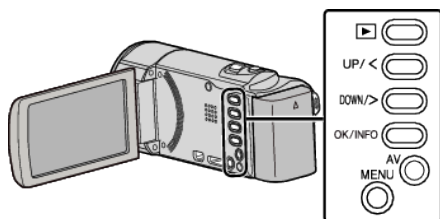


- 1 Press MENU.

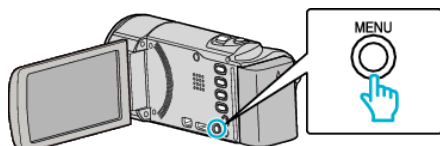 

 - 2 Select the desired menu and press OK.

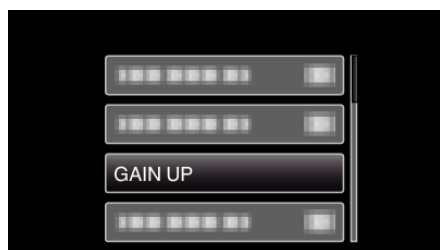

 - 3 Select the desired setting and press OK.

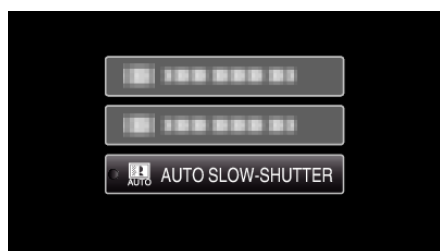

Memo :

- To return to the previous screen, press MENU.

Returning All Settings to Default:

- Set using "FACTORY PRESET" in the basic settings menu.