 


DATE DISPLAY STYLE

 
Sets the order of year, month, day and the time display format (24H/12H).

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

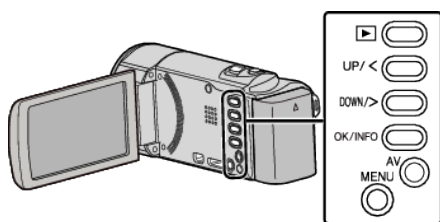


1 Press MENU.

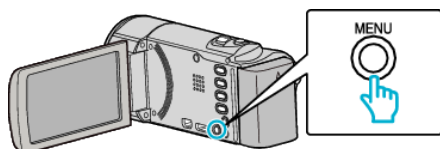

 
2 Select "DISPLAY SETTINGS" and press OK.

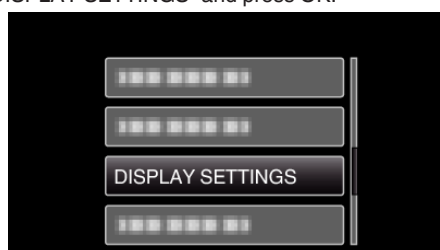

 3 Select "DATE DISPLAY STYLE" and press OK.

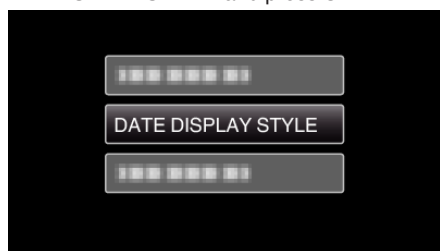

 4 Set the style of date and time display.

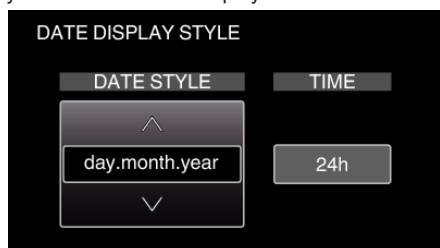

- For date display, set to any format from "month.day.year", "year.month.day", and "day.month.year".
- For time display, set to any format from "12h" and "24h".
- Press UP/< or DOWN/> to move the cursor.
- After setting, press OK.

CLOCK SETTING



CLOCK SETTING



- The order of "Year, Month, Day, Time" changes according to the date display style.

Clock Set Style

The clock set style of this unit varies with the models.

