


ON-SCREEN DISPLAY

Sets whether to show on-screen displays such as icons during playback.


Setting	Details
OFF	No display at all.
ON	Displays everything.

Displaying the Item

Memo : _____
To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

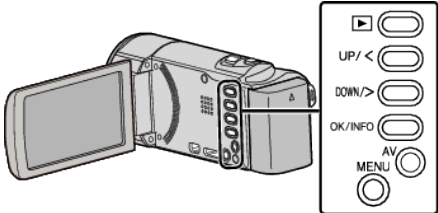

1 Press MENU.

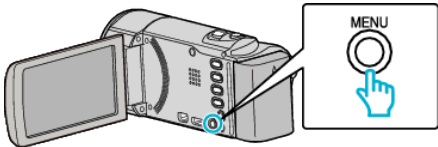

2 Select “ON-SCREEN DISPLAY” and press OK.

