 


Deleting Selected Files

Deletes the selected files.

Memo :

 
To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

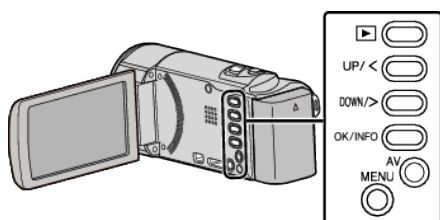


Caution :

- Deleted files cannot be restored.


- 1 Select the playback mode.

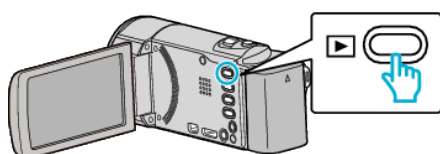


- 2 Press MENU.

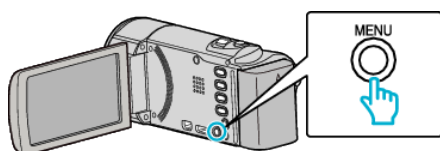 

- 3 Select "DELETE" and press OK.

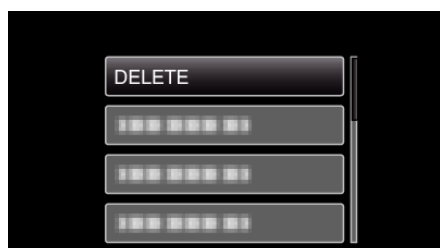 


- 4 Select "FILE SELECT" and press OK.

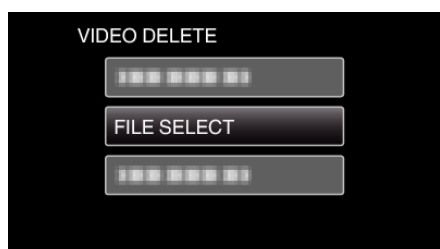 


- 5 Select the files to delete and press OK.



 - Press UP/< or DOWN/> to select files.
 - A delete mark appears on the selected file.
To remove the delete mark, press OK again.
 - To move to the next page on the index screen, slide along the  (zoom) lever.
- 6 After selecting all the files to delete, press MENU.

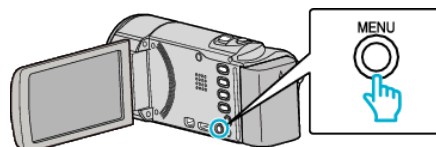

- 7 Select "EXECUTE" and press OK.

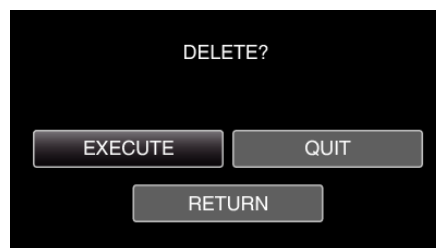 

- After deleting, press OK.
- To cancel the deletion, select "QUIT" and press OK.
- To return to the previous screen, select "RETURN" and press OK.

Memo :

- Files that are protected cannot be deleted.
Release protection before deleting the file.