

WIND CUT


Reduces the noise caused by wind.

Setting	Details
OFF	Deactivates the function.
ON	Activates the function.


Displaying the Item

Memo :

To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

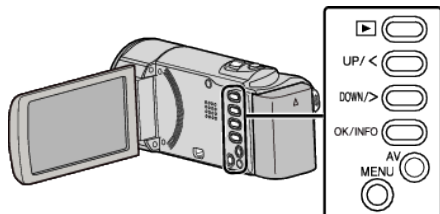

1 Press MENU.

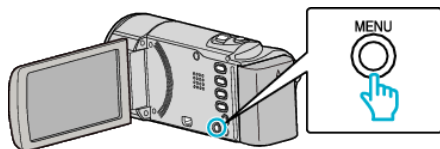

2 Select "WIND CUT" and press OK.

