


## Protecting All Files

 
Protects all files.

### Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

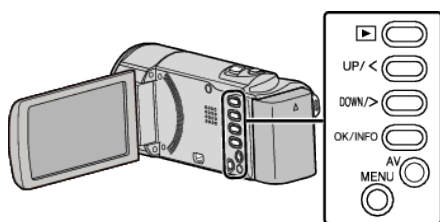


- 1 Select the playback mode.

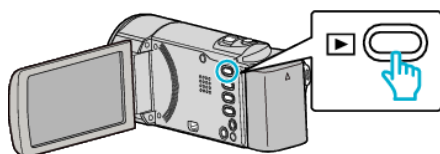

- 2 Press MENU.

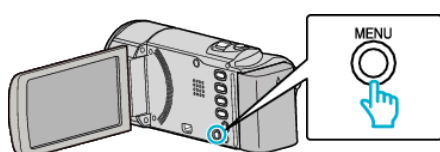 

 - 3 Select "PROTECT/CANCEL" and press OK.

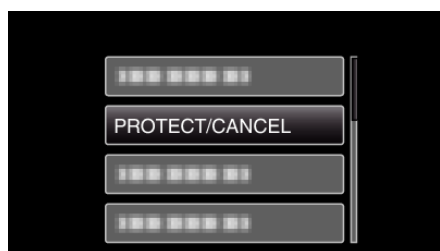

- 4 Select "PROTECT ALL" and press OK.



- 5 Select "YES" and press OK.



- After setting, press OK.