

**DISPLAY ON TV**


Displays icons and date/time on a TV screen.

Setting	Details
OFF	Does not display icons and date/time on TV.
ON	Displays icons and date/time on TV.


**Displaying the Item**

**Memo :**

To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

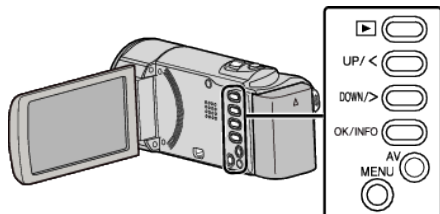

1 Press MENU.

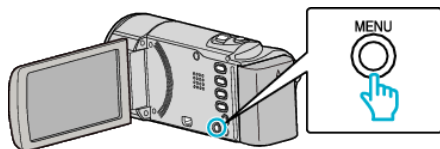

2 Select "CONNECTION SETTINGS" and press OK.



3 Select "DISPLAY ON TV" and press OK.

