


## Remaining Recording Time/Battery Power


You can check the remaining video recording time on the SD card as well as the remaining battery power.

### Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

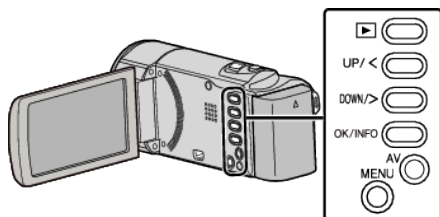


- 1 Open the LCD monitor.

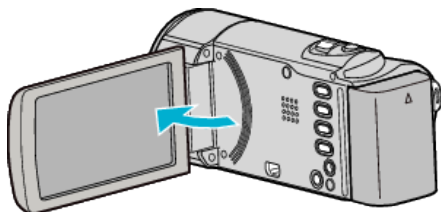

- 2 Press OK/INFO.

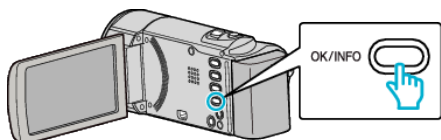


- 3 Display the remaining recording time.

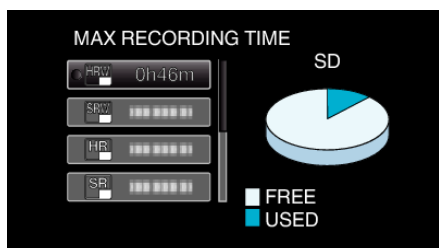

- To display the remaining battery power, press OK/INFO.
- To exit the display, press MENU.

- 4 Display the remaining battery power.

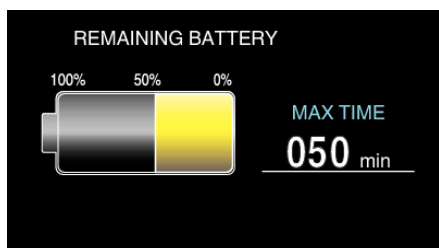

- To exit the display, press OK/INFO.
- Remaining battery power will not be displayed when the AC adapter is connected.

### Memo :

- You can change the video quality from the remaining recording time display. Select the video quality with the UP/< and DOWN/> buttons and press OK.

## Recording

### Approximate Video Recording Time

Quality	SDHC/SDXC Card					
	4 GB	8 GB	16 GB	32 GB	48 GB	64 GB
HR/HRW	1 h	2 h	4 h	8 h 10 m	12 h 10 m	16 h 30 m
SR/SRW	2 h	4 h 10 m	8 h 30 m	17 h 20 m	25 h 30 m	34 h 30 m

- The actual recording time may shorten depending on the shooting environment.

### Approximate Recording Time (Using Battery)

Battery Pack	Actual Recording Time	Continuous Recording Time
BN-VG107E (Supplied)	40 m (35 m)	1 h 5 m (1 h)
BN-VG114E	1 h 15 m (1 h 5 m)	2 h 10 m (1 h 55 m)
BN-VG121E	1 h 55 m (1 h 40 m)	3 h 15 m (2 h 55 m)
BN-VG138E	3 h 20 m (3 h)	5 h 45 m (5 h 20 m)

- The above are values when "MONITOR BRIGHTNESS" is set to "3" (standard).  
( ): Values when "MONITOR BRIGHTNESS" is set to "4" (brighter)
- The actual recording time may be shorter if zooming is used or if recording is stopped repeatedly.  
(It is recommended to prepare battery packs ready for three times the expected recording time.)