


WIND CUT

Reduces the noise caused by wind.


Setting	Details
OFF	Deactivates the function.
ON	Activates the function.

Displaying the Item

Memo : _____
To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

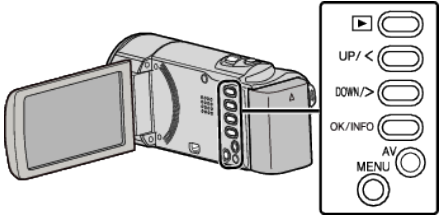

1 Press MENU.

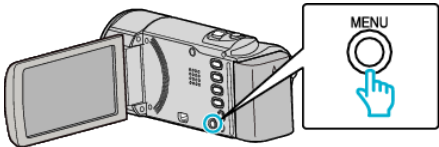

2 Select "WIND CUT" and press OK.

