 



Manual Recording

You can adjust settings, such as brightness, by using the manual mode.


Memo : To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

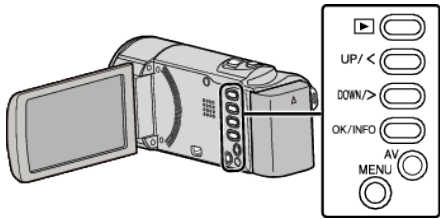

 
1 Open the lens cover.

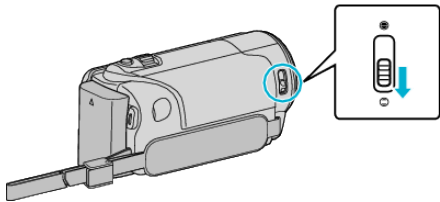

2 Open the LCD monitor.

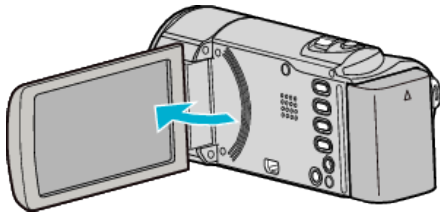 


3 Select the Manual recording mode.

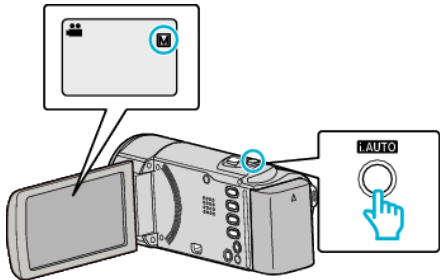 

- If the mode is Intelligent Auto, press the i.AUTO button to switch. The mode changes between Intelligent Auto and Manual with every press.

 4 Start recording.

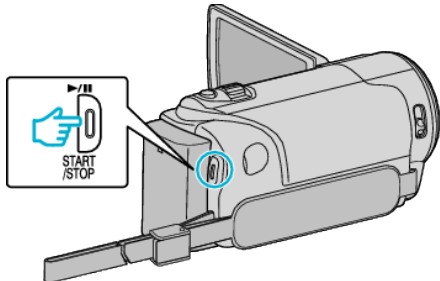

- Press again to stop.

Memo : The manual settings are displayed only in the manual mode.

Manual Recording Menu

The following items can be set.

Name	Description
SCENE SELECT	• Recordings that suit the shooting conditions can be performed easily.
FOCUS	• Use manual focus if the subject is not focused automatically.
BRIGHTNESS ADJUST	• Overall brightness on the screen can be adjusted. • Use this when recording in a dark or bright location.
WHITE BALANCE	• Overall color on the screen can be adjusted. • Use this when the color on the screen appears differently from the actual color.
BACKLIGHT COMP.	• Corrects the image when the subject appears dark due to backlight. • Use this when shooting against the light.
TELE MACRO	• Use this to take close-up (macro) shots of the subject.