 


Backing Up All Files

 
Before making backup, make sure that enough free space is left in the computer's hard disk (HDD).

Memo :


To select/move cursor towards up/left or down/right, press the button UP/< or DOWN/>.

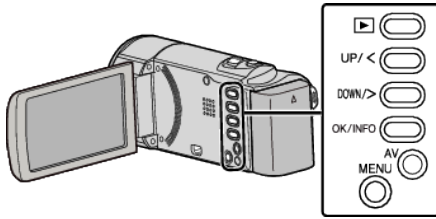


- 1 Open the LCD monitor.

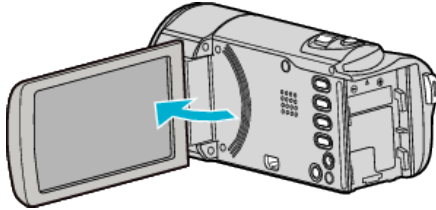

 
- 2 Connect the USB cable and the AC adapter.

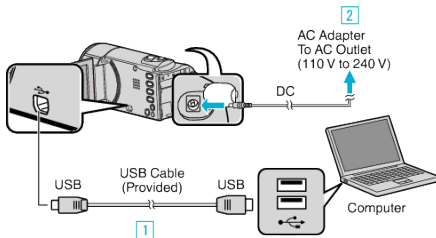

 
- 1 Connect using the provided USB cable.
 - 2 Connect the AC adapter to this unit.
- This unit powers on automatically when the AC adapter is connected.
 - Be sure to use the supplied JVC AC adapter.
 - The provided software LoiLoScope AX starts up on the computer. The subsequent operations are to be performed on the computer.
- 3 Select the files to back up.

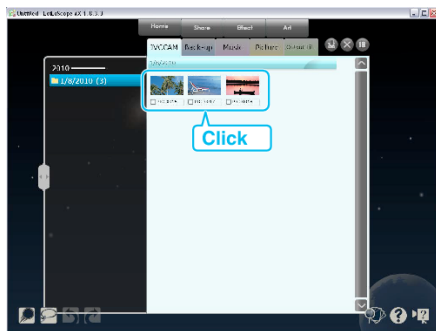

- 4 Select "Back-up".

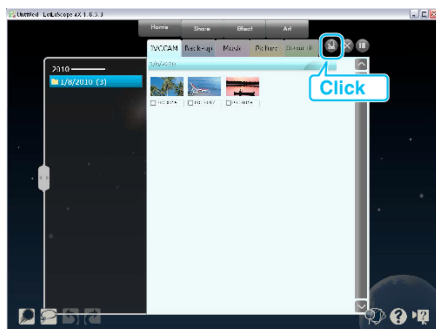 

- 5 Start backup.

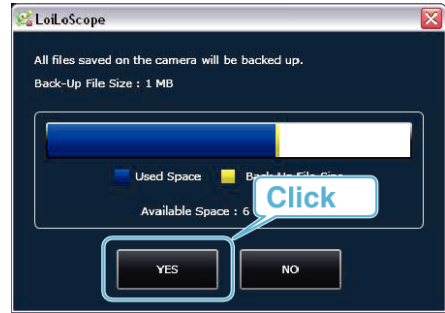 

- Backup starts.

Memo :


- Before making backup, load the SD card in which the videos are stored on this unit.
- After backing up your files using the provided software, they cannot be restored to this unit.
- If you encounter any problems with the provided software LoiLoScope AX, please consult the "Customer Support Information".

Homepage	http://loilo.tv/product/15
----------	---

- Delete unwanted videos before making backup. It takes time to back up many videos.

Disconnecting this Unit from Computer

 - 1 Click "Safely Remove Hardware and Eject Media".

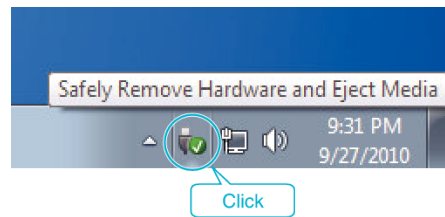

- 2 Click "Safely Remove USB Mass Storage Device".
- 3 (For Windows Vista) Click "OK".
- 4 Disconnect the USB cable and close the LCD monitor.