 


Playing Back Videos

 
You can select and play back the recorded videos from an index screen (thumbnail display).

- 1 Select the playback mode.

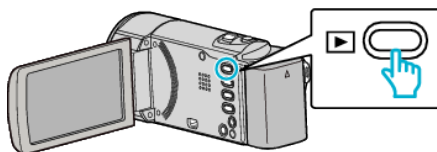

- Press again to return to the recording mode.

- 2 Select the desired video and press OK or .

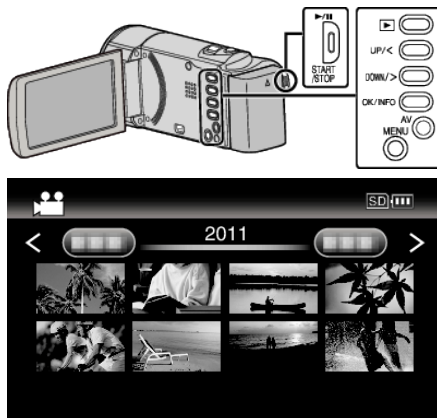

- Press the button to stop (pause) playback.
- To return to the index screen, slide along the (zoom) lever while playback is paused.
- To move to the next page on the index screen, slide along the (zoom) lever.

Operation Buttons/Levers for Video Playback

During Index Screen Display

Operation Button/Lever	Description
UP/< DOWN/>	Select/move cursor
OK/INFO 	Play back video
Zoom T/W	Move to the next or previous page

During Video Playback


Operation Button/Lever	During Video Playback	During Video Pause
	Pause	Playback
Zoom	-	Stop (returns to thumbnail display)
Zoom T / Vol.+	Increases volume level	-
Zoom W / Vol.-	Decreases volume level	-
UP/<*	Reverse search	Frame-by-frame playback in reverse direction
DOWN/>*	Forward search	Frame-by-frame playback in forward direction

*Press and hold to start slow playback.

Caution :

- Make a backup of important recorded data.
It is recommended to copy your important recorded data to a DVD or other recording media for storage.
JVC will not be responsible for any lost data.

 Adjusting the Volume of Videos



Checking the Recording Date and Other Information

You can display the recording date and duration of the selected file.

- 1 Pause playback.
- 2 Press OK/INFO.

